


EVOLVE SERIES

Start-up of Filox Air Filter

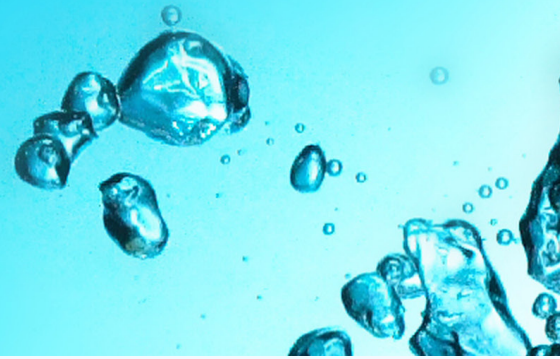

FILOX AIR FILTER



START-UP PROCEDURE

1. Assemble the filter on a level and horizontal foundation. Place the filter tank(s) in the desired position.
2. Put the riser tube with bottom distributor in the middle of the tank and seal the tube on the top with a cap or tape. Make sure that the riser tube is cut off at the correct height.
3. Check one more time the positioning of the filter tank(s) and points of connections.
4. Put a volume of water (e.g., 30% of the tank content or more) into the tank so the lower distributor system is submerged and then pour the filter medium in the tank with the necessary precautions. The coarse gravel is put in firstly as a support layer. Make sure that the support gravel is never dropped directly on the distributor, so as not to risk damage to the lower distributor. Continue with adding the medium layer (Garnet #8-12) on the coarse gravel. After this add the active medium Filox to the filter.
5. Remove the seal (cap or tape) from the riser tube.
6. Mount the valve on the riser tube and make the connection to the water supply and drain.
7. Connect the power supply correctly. Put the bypass in "service" and let the water gently flow into the filter and open a tap after the filter to remove the air from the unit.
8. The filter/valve is fully pre-programmed by Euraqua. As installer you still need to program the time and day into the system. This is the first screen you get during the start-up from the valve. Please change this according to the manual.
9. If necessary, you can adjust some parameters in the installer level of the programming. To access this level, you should press simultaneously on "next" and "up" for 3 seconds. In this level you can change:
 - Days between regen
 - The hour of regeneration
 - Possible service alarms
10. Start a manual regeneration by pressing "REGEN" for 5 seconds. When the valve goes into the regeneration phase the colour of the screen will turn "red". The first cycle is the backwash air. Let this be done and wait. When the phase changes to the "Backwash", let it stand for X minutes in the backwash position by disconnecting the power supply. The outcoming water will be "Black". It is a must to wait until the outcoming water is clear.
11. When the water is clear, please connect back to the power supply and continue with the remaining regeneration steps.
12. Repeat steps 9 through 10
13. When the water is 100% clear, the filter is ready to be used.

Important note: For units starting from a WS1.5" valve, the check valve for the inlet is not included (*).

Please add a check valve into the piping as close as possible to the inlet of the valve, this to prevent air from leaving the system.